


SWAT+ modeling

How to add inflow hydrograph

Implementation workflow using swatpluseditor Edit SWAT+ Inputs → Point Source/Inlet → Edit Inlet Point → Set the time step to **“Daily”** and import the CSV file prepared for that specific inlet point.

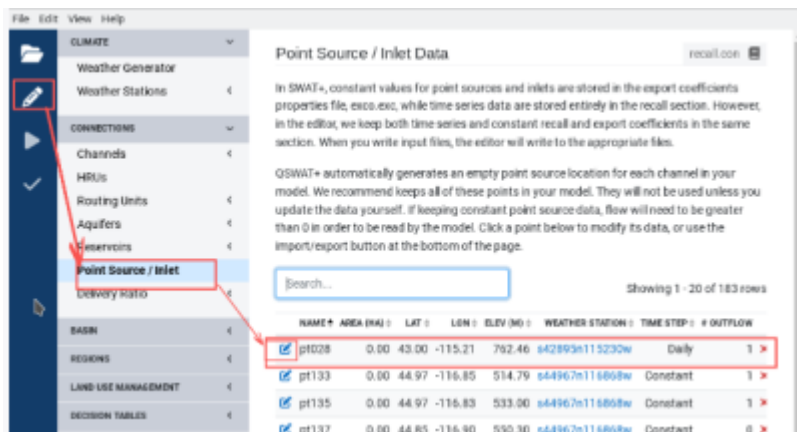

To prepare the input file, we can export the empty recall file in .csv format, add the flow data (in volume, m³), and then import the updated file back into SWAT+.

SWAT+, Modeling

From: <https://clawiki.isnew.info/> - **CLAWRIM Wiki**

Permanent link: https://clawiki.isnew.info/swatplus_modeling

Last update: **2026-05-29 11:22 am**

